

# TENT ASSEMBLY INSTRUCTIONS

1



Unpack the tent from the bag and spread it out on a smooth and clean surface. Check all valves for tightness.

2



Inflate two opposing legs together as shown in the picture.

3



Inflate the third and fourth leg.

4



Tighten the bottom cover using adjustment straps as shown in the picture.

5



Attach three walls (if available) and stabilize tent with leg weights previously filled with sand.


6



Stabilize the tent with pins, stakes and cables. Attach the fourth wall (if included) to finish assembly.

# DISMANTLING

1

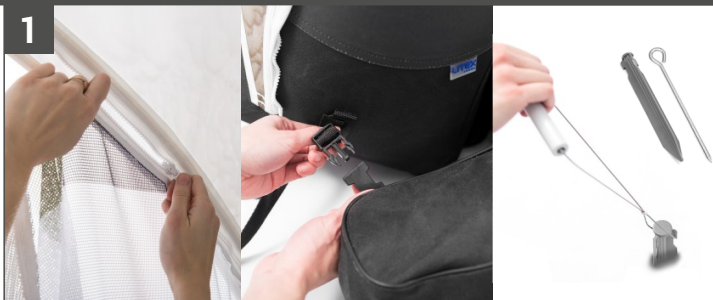

Unclip the walls and leg weights (if included), remove pins and anchor stakes using the pulling device for pins.

2



Release the air by unscrewing the valves.

3



Arrange the legs in one direction and start folding the whole thing to release the remaining air, as shown in the photo.

4



Pack the tent in a bag.

**Attention:** The product contains inner tubes, do not allow for contact with sharp objects!  
Do not store a wet tent after folding!  
Do not allow contact with fire and heat sources!  
While assembled inflate air to the legs every 12 hours.

**LITEX**  
PROMO

# LEGS REPLACEMENT INSTRUCTIONS

1



Lay out the tent inside out - place legs in one direction, parallel to each other.

2



Unclip the tension straps at the leg to be replaced, then unfasten the zipper (the zipper is in the upper part of the sheathing).

3



Unscrew the knobs on the leg-connecting profile; pull out the exchanged leg. Fold and store away the leg.

4



Insert a new leg into the profile. Place the metal eyelets on the screws in the knobs and screw the screws into the profile.

5



Fasten the leg to the sheathing with a zipper (start in the bottom part).

6



Fasten the straps (put the tension straps on the bottom of the legs through the regulators).

# INNER TUBE EXCHANGE INSTRUCTIONS

1

Perform steps 1-3 as per legs replacement instructions.

2




Straighten the leg. Unzip the top and bottom zippers.

3



Slide the two valves inside the leg (detaching the Velcro from the inside). Remove the inner tube ends from the inner leg pockets and remove the innertube by dragging it through the opening at the bottom of the leg (be careful not to damage the valves). Fold and store away.

4

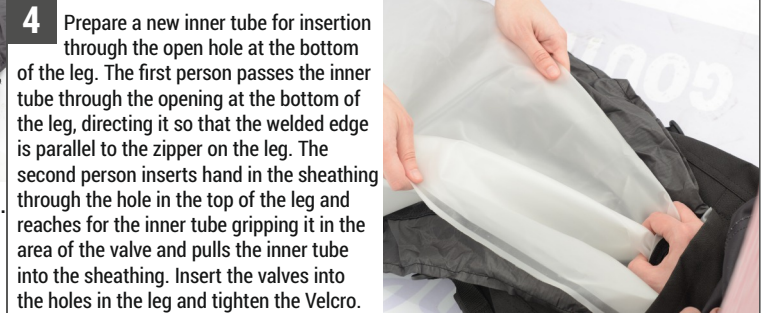

Prepare a new inner tube for insertion through the open hole at the bottom of the leg. The first person passes the inner tube through the opening at the bottom of the leg, directing it so that the welded edge is parallel to the zipper on the leg. The second person inserts hand in the sheathing through the hole in the top of the leg and reaches for the inner tube gripping it in the area of the valve and pulls the inner tube into the sheathing. Insert the valves into the holes in the leg and tighten the Velcro.

5



Insert the inner tube ends into the inner pockets, fold the pockets fastening the Velcro fasteners, hide them in the sheathing and close the zippers.

6

Perform steps 4-6 as per the legs replacement instructions.

\*TWO PERSONS ARE RECOMMENDED TO REPLACE THE INNER TUBE

Attention: The product contains inner tubes, do not allow for contact with sharp objects!

Do not store a wet tent after folding!

Do not allow contact with fire and heat sources!

While assembled inflate air to the legs every 12 hours.

**LITEX**  
PROMO




# INSTRUCTIONS FOR THE INSTALLATION OF A NEW COVER

1



Lay out the tent inside out - place legs in one direction, parallel to each other.

2

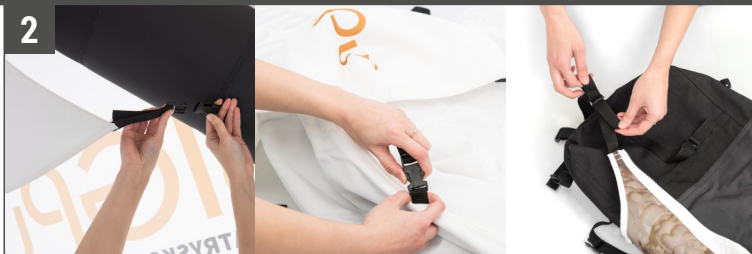

Unclip the top sheathing (air vent) and inner cover. Unfasten the tension straps at the bottom of each leg.

3



Unfasten the zippers (the zipper is located at the top of the sheathing). Repeat 4 times. Fold and store away the cover.

4



Lay the new cover inside out. Fasten the zippers (start attaching the cover to the legs from below). Repeat the fastening 4 times.

5



Fasten the straps (put the tension straps on the bottom of the legs through the regulators).

6



Place the tent on the outer side and fasten the valves and inner cover in the upper part of the sheathing (canopy) using clamps.

**PLEASE READ ALL INSTRUCTIONS BEFORE USING AND KEEP FOR FUTURE REFERENCE**

**Attention:** The product contains inner tubes, do not allow for contact with sharp objects!  
Do not store a wet tent after folding!  
Do not allow contact with fire and heat sources!  
While assembled inflate air to the legs every 12 hours.